 
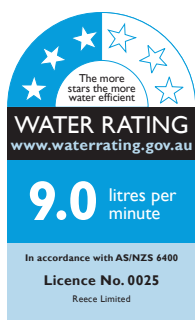 
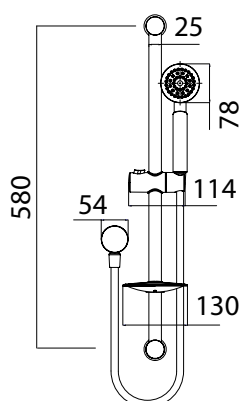 
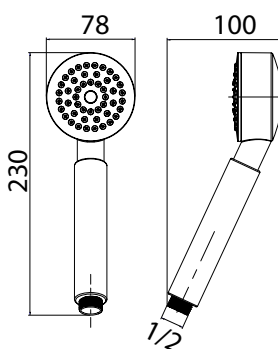 
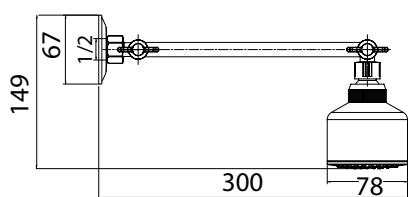 


# BASE SHOWERS

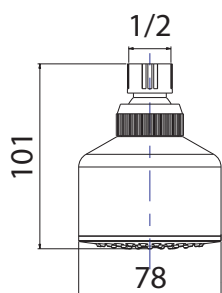

**Disclaimer:** Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 1

To see the complete BASE range go to [www.reece.com.au/bathrooms](http://www.reece.com.au/bathrooms)



# BASE SHOWERS

## SPECIFICATIONS

<b>Recommended use</b>	Domestic, hotel and commercial
<b>Colour availability</b>	Chrome
<b>Spray function</b>	One function
<b>Pressure rating</b>	Maximum continuous operating pressure 1000kPa. For best performance and longer life we recommend 150-500kPa. Hot and cold water inlet pressure should be equal.
<b>Suitable Hot Water Units</b>	Storage tank: Yes Continouos Flow: Yes Gravity Feed: Not suitable
<b>Water Efficiency</b>	3 Star, 9 L/min
<b>Standards</b>	AS 3662

## CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

## RAIL SHOWER INSTALLATION INSTRUCTIONS

1. Please flush out new pipework prior to connecting the rail shower
2. Assemble slider bracket and soap dish to the shower rail
3. Securely fasten the shower rail to the wall at a suitable height – see figure 1
4. Fit wall elbow to water outlet and ensure that it is facing downwards
5. Connect the hand shower and hose to the wall elbow and ensure that the connection is secure
6. Check for leaks.

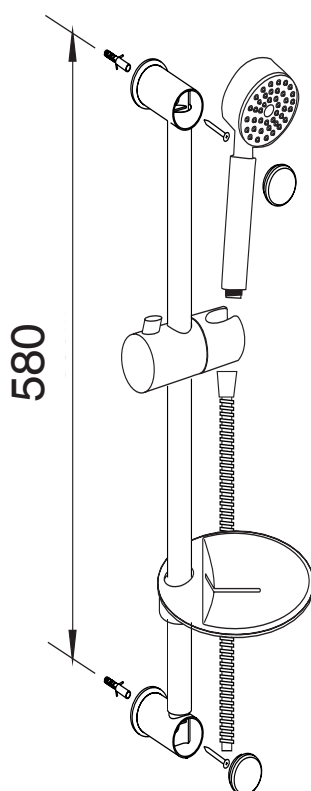 


Figure 1