

ROCA MERIDIAN WALL HUNG BIDET

INSTALLATION INSTRUCTIONS

Note:




Installation of this Pan requires:

1860411 - Nylon Bush & Covers for W/Hung Pan (not supplied)




Also may be required - either of the Wall Brackets below (not included)

1852030 - Wall Hung Pan Cavity Wall Bracket

1852031 - Wall Hung Pan Solid Wall Bracket

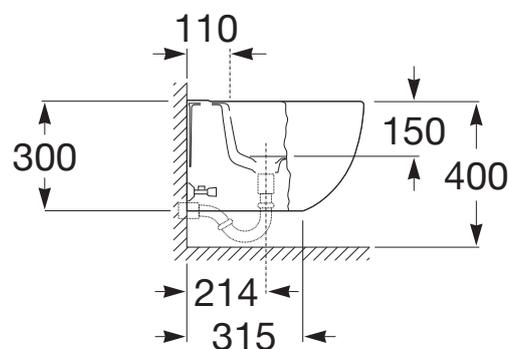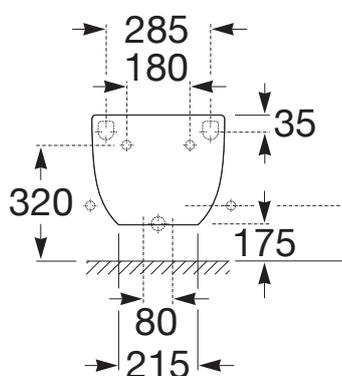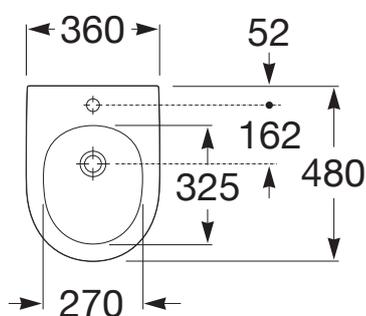

Wall Hung Bidet 480mm

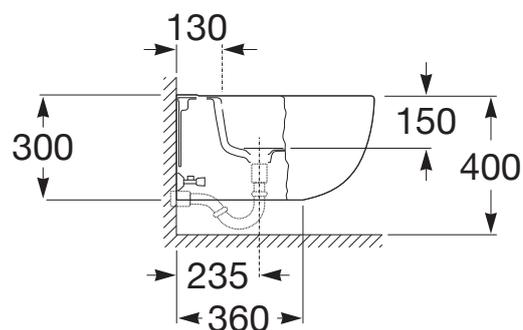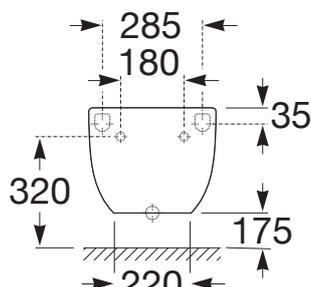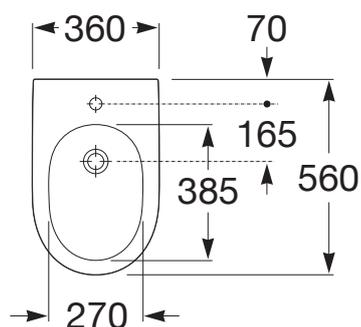


Wall Hung Bidet & Cover 560mm

Dimensions are nominal measurements only.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.

ROCA MERIDIAN WALL HUNG BIDET

INSTALLATION INSTRUCTIONS

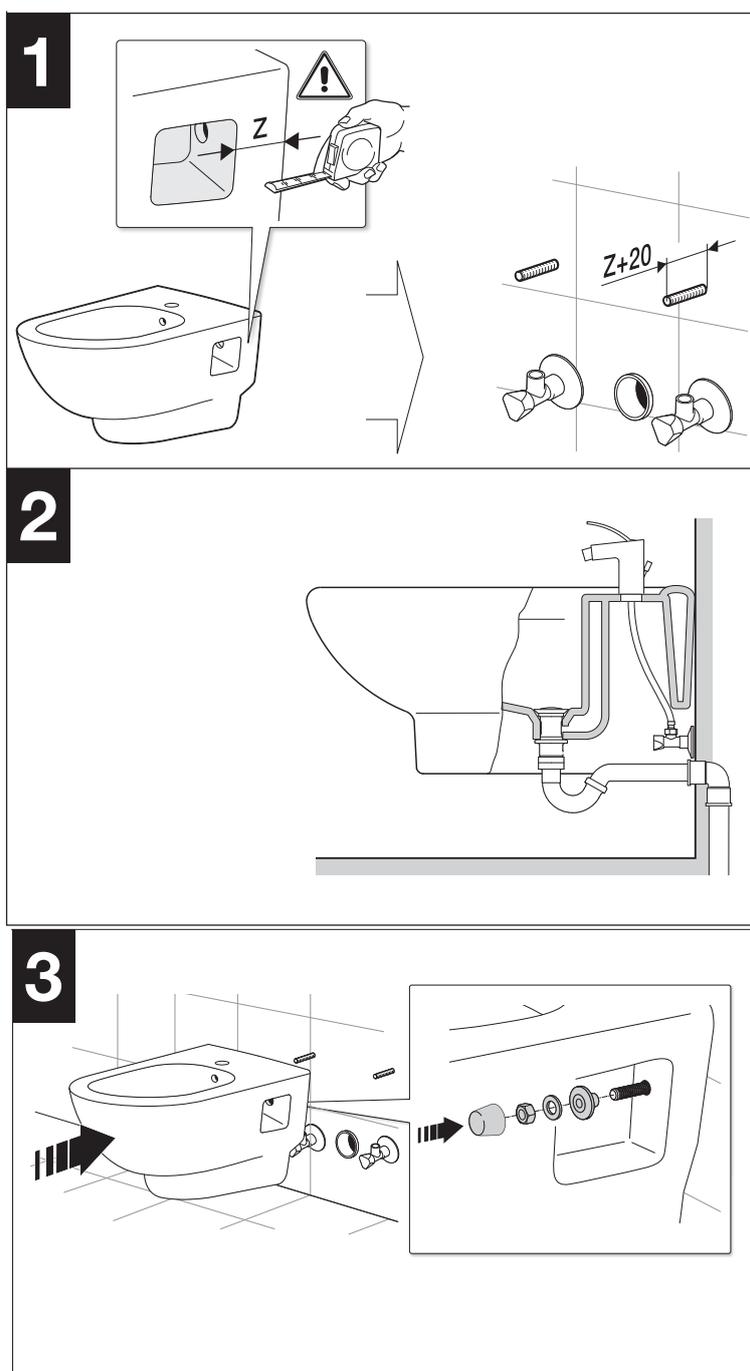

Dimensions are nominal measurements only.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.