






CLOSE COUPLE TOILET

Cygnet Hygiene Rim - Square Installation Manual


3324 / 4325 Bottom Inlet




American Standard

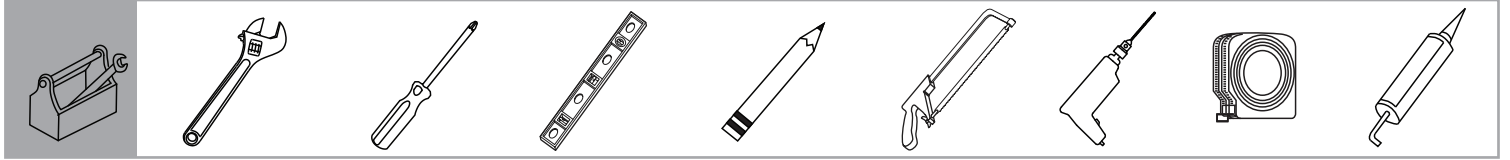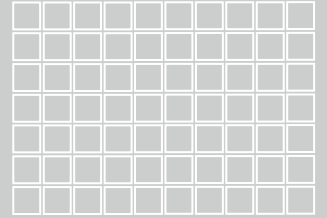

x1

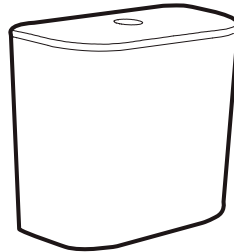

x1

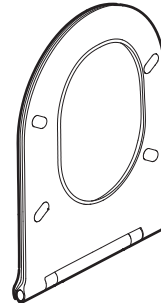

x1



x1



x1




x1







x1



x1

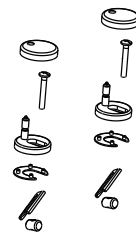


x1

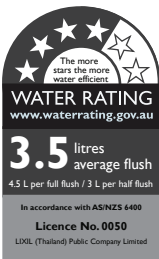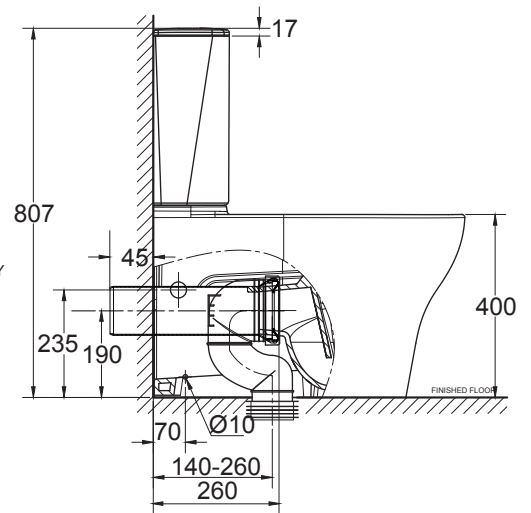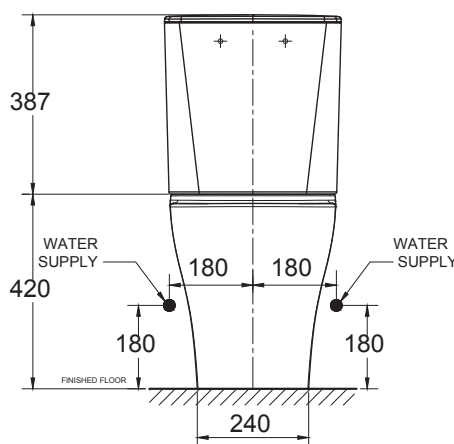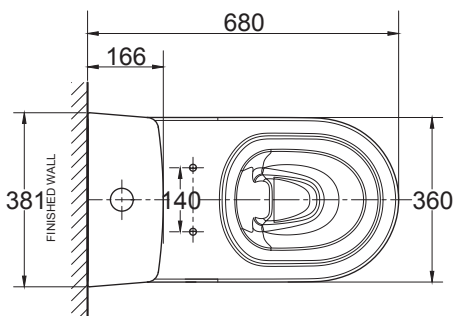





1

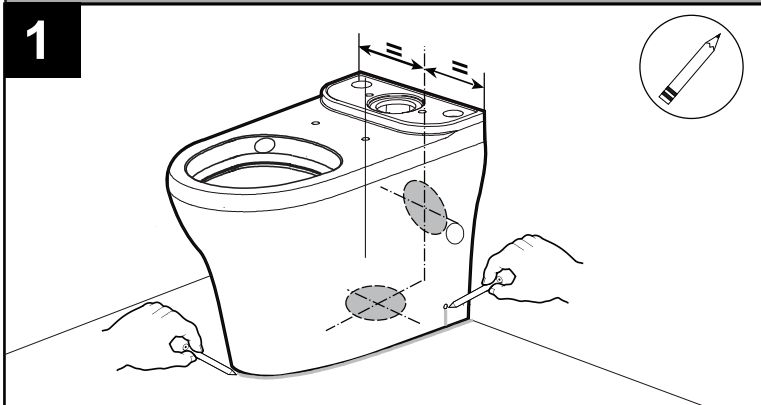


2

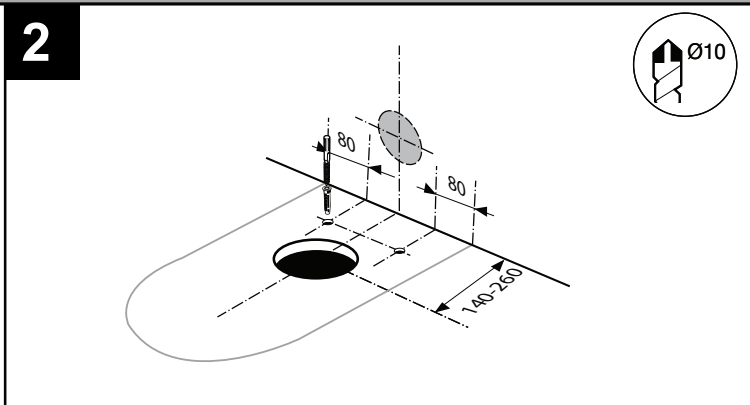


3

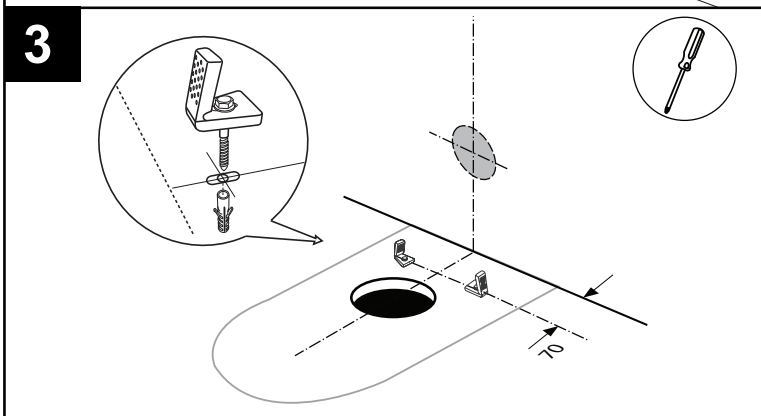


4

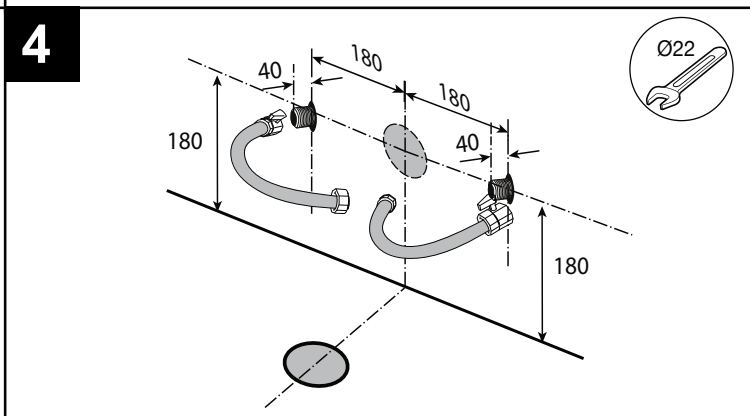

5a

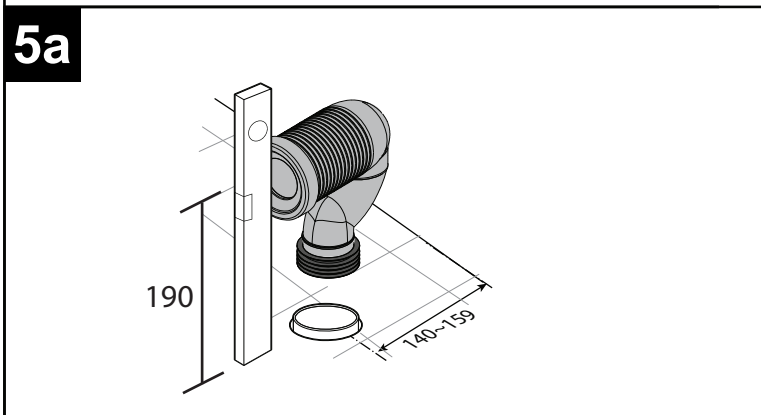

5b

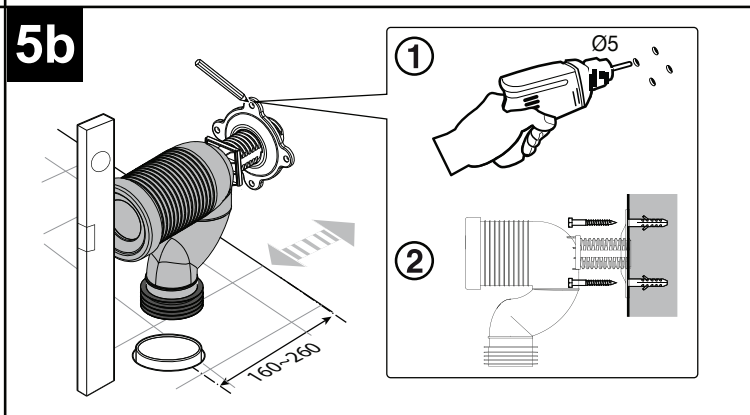

6a


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)
140-150 mm.	10 mm.
151-159 mm.	20 mm.

6b


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)	ROUGHING-IN (A)	CONNECTOR CUTOUT (B)
160-170 mm.	30 mm.	211-220 mm.	80 mm.
171-180 mm.	40 mm.	221-230 mm.	90 mm.
181-190 mm.	50 mm.	?	?
191-200 mm.	60 mm.	261-270 mm.	130 mm.
201-210 mm.	70 mm.	C=116 - (A-160)	




7

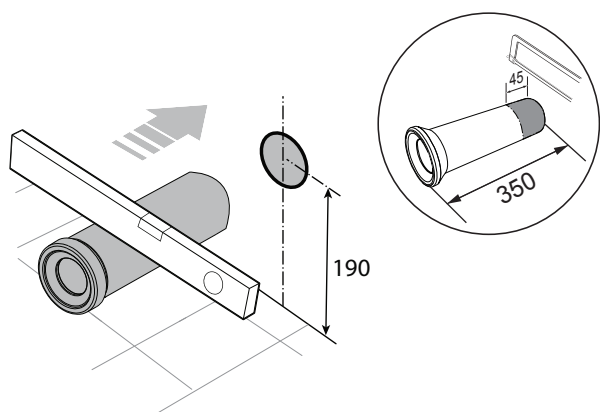


8

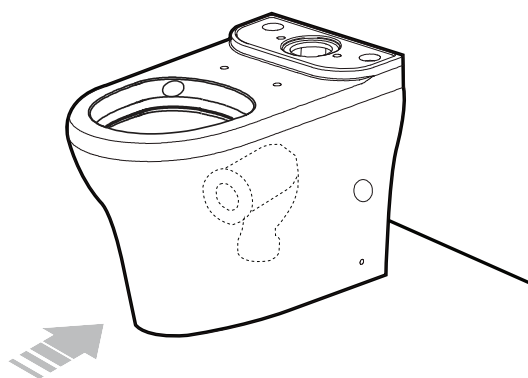


9

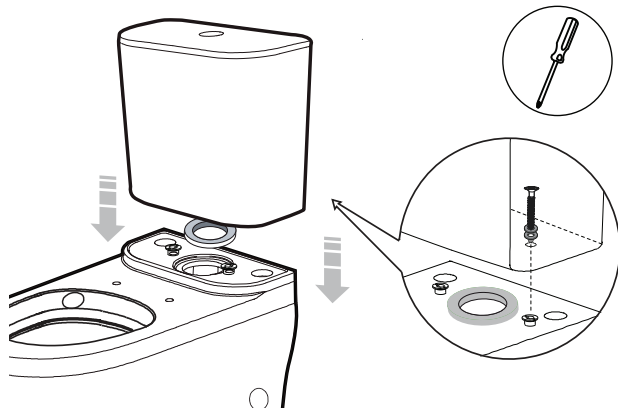


10

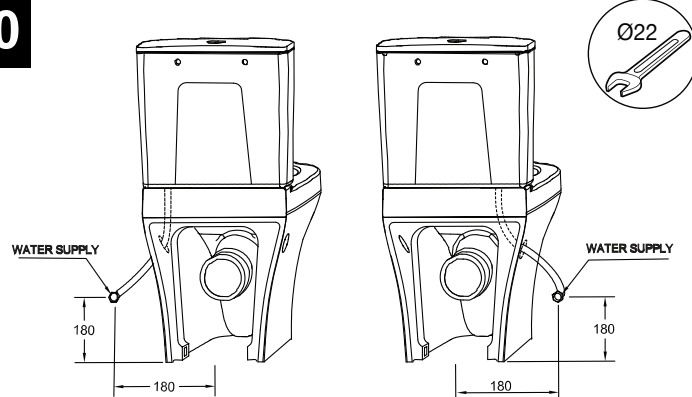


11

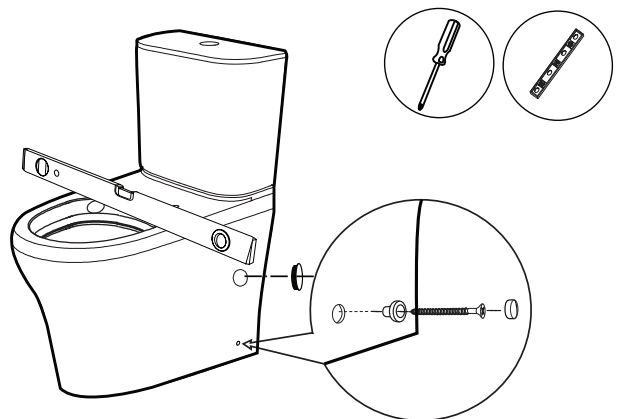

12

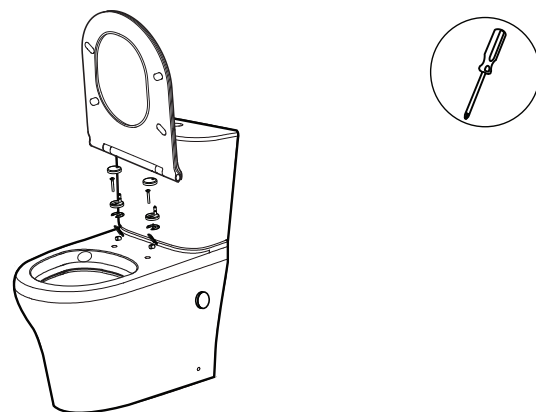

13

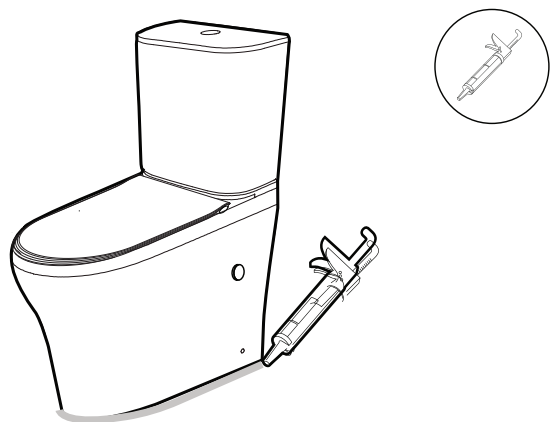

14

IMPORTANT

Before turning on water supply check:

1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

Now fill cistern and recheck water level:

4. Check carefully for leaks
5. Test the cistern flushes

AUS

Reece Australia Pty Ltd
118 Burwood Hwy
Burwood VIC 3125
Tel.: 1800 080 055
Email: customercare@reece.com.au



NZ

Robertson
25 Vestey Drive
Mt Wellington, Auckland
Tel.: +64 9 5730490
Email: sales@robertson.co.nz