


UPWARDS FLUE DIVERTER

For Thermann 6 Star Gas Continuous Flow Water Heater

Models: - 16NG50-6/16LP50-6, 16NG60-6/16LP60-6, 20NG50-6/20LP50-6, 20NG60-6/20LP60-6, 26NG50-6/26LP50-6, 26NG60-6/26LP60-6

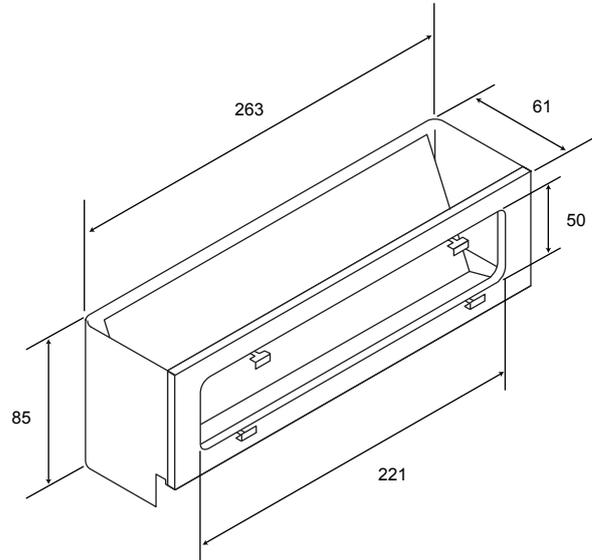

The location of the Thermann HWU and flue installation must comply with AS/NZS 5601


Installation Requirements

- Minimum clearances on the conditions below eaves, balconies and other projections must be a minimum of 600mm. Other relevant clearances must conform to AS/NZS 5601.
- **Caution:** handle flue diverter with care to avoid injury from any sharp edges.

Installation Instructions

Fitting an upwards flue diverter to a Thermann Gas Continuous Flow Water Heater:

- Remove front cover off the water heater unit.
- Fit the flue diverter on the front cover tightly. Then, secure by bending the four hooks from the rear side.
- Place the front cover back on the water heater unit.

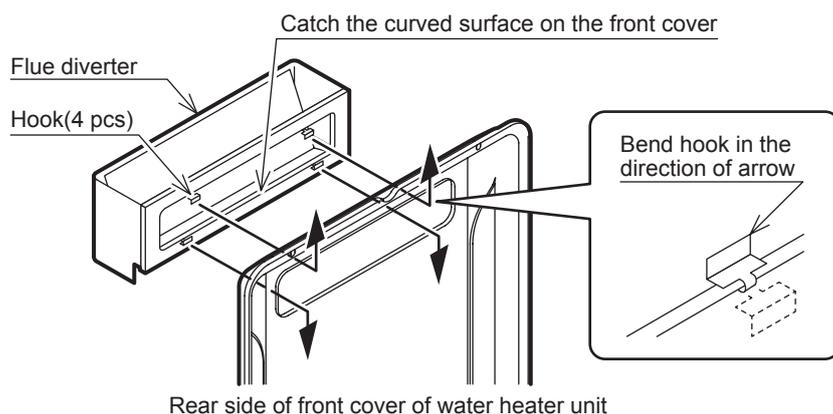

Side view of flue diverter installation

