


Methven Aio Aurajet Twin Shower Matte Black (3*)

IMPORTANT: Please read all of the instructions and turn off water supply before installation.


Step 1

- Install a ½" male nipple at the recommended height of 1800mm from the ground.
- Wall lining hole should be cut or finished as per the dimension shown in the diagram on the right.
- Cut off the threaded nipple 20±2mm from the wall lining and apply thread seal tape to ensure a good seal.
- Screw the inlet connector onto the nipple ensuring that the o-ring is sufficiently compressed to create a watertight seal.
- Screw the bottom rail connector to a wall stud vertically in line with the inlet connector and at the correct distance.

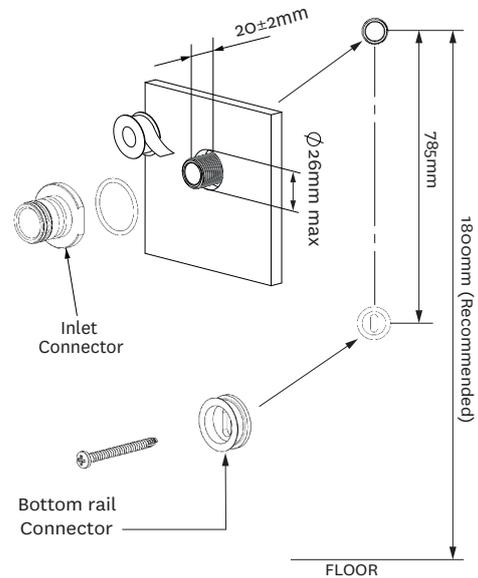

Step 2

- Firmly push the shower rail onto the top inlet connector and bottom rail connector.
- Secure in place by tightening the grub screws firmly using the hex key provided.

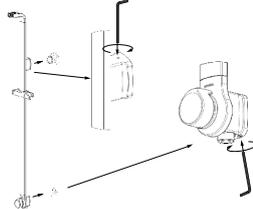


Step 3

- Fit overhead shower into elbow bracket and push firmly until the clips engage




Step 4

- Fit the elbow cover into the back of the elbow bracket.
- Clip into the elbow bracket and overhead shower.

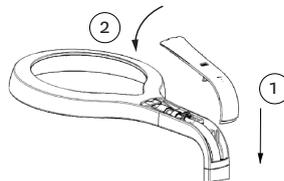


Step 5

- To adjust slider position, rotate the slider handle to unlock and lock the slider as shown.

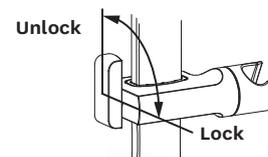

Step 6

- Make sure a washer is in both ends of the shower hose.
- Screw one end of the hose to the bottom of the shower rail, attach handset and place firmly in holder.

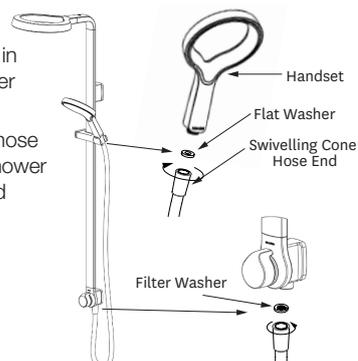

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference

Methven Aio Aurajet Twin Shower Matte Black (3*)

Care and Cleaning

Run hot water through shower for 2 minutes before first use.

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

Clean filter washer located in the shower hose and in the overhead shower periodically. To access filter washer in overhead shower push down on release button, hold the elbow bracket and pull shower head away from it.

Remove filter washer from the shower head waterway by gently levering out with a small screw driver.

